

Chap 6 SELF-DIAGNOSIS

The machine is equipped with a self-diagnosis system that can detect and signal a series of malfunctions.

Anomaly	Description and possible remedies
E01	No rinse. The warning comes on at the end of the cycle, if the water level in the tub is not correctly restored. Check that the hydraulic connections are correct and that the water tap is open. If the problem persists contact a technical assistance centre.
E02	Water drainage anomaly. Water does not drain or drains abnormally. Check to see if the overflow has been removed. Check the drain tube is not bent or crushed, and that none of the filters are clogged. Run another drain cycle.
E03	Boiler temperature reset anomaly. The boiler temperature reset has not occurred within the time limits set forth in the wash cycle. Turn the machine off and then back on and run another cycle.
E04	Water filling anomaly. Check whether the plumbing connections are correct, and that the water supply cock is open. Check the presence of the overflow.
E05	Tub thermometer anomaly. (Probe open) The machine does not measure the temperature in the tub. Turn the machine off and then back on.
E06	Tub thermometer anomaly. (Probe shorted out) Interrupt the programme in progress, and shut off the dishwasher. Turn it back on after a few minutes and start the cycle again.
E07	Boiler thermometer anomaly. (Probe open) The machine does not measure the temperature in the boiler. Turn the machine off and then back on.
E08	Boiler thermometer anomaly. (Probe shorted out) Interrupt the programme in progress, and shut off the dishwasher. Turn it back on and start the programme again.
E09	Boiler loading time out: boiler not filled. Impossible to carry out rinse cycle. Check that the water tap is open. Run a new complete cycle.
ESF	Electro-mechanical safety device: the boiler or tub safety thermostats have cut in, or the tub safety pressure switch has been triggered. Contact a technical assistance centre.
ESL	Incorrect tub level: the tub pressure switch has detected too much or too little water in the tub. Contact a technical assistance centre.
E22	Tub heating time out: washing water heating error, switch the dishwasher off and then on again.
CAUTION! Turning the machine off and then back on resets the notification. If, after following the instructions provided, the problem reoccurs, contact an authorized service centre.	

Diagnostics

E 21

→ Boiler-rinse time-out

Machine check

→ Start rinse
Boiler level must drop.
Pressure switch must go off (open) within rinse time

What to check?

→ Rinse pump
Rinse nozzles
Boiler pressure switch system

